

Do NOT unplug cables

In case of any issues, contact:

gcfix@princeton.edu

Instructions for cleaning

- Please use only LCD cleaner or cleaning wipes.
- Do NOT use any window cleaners. They can potentially damage the TV screen protector.

Please Read

- Make sure both the TV and Xfinity box are on. Check the LED indicators.
- You can use the Xfinity remote for controlling the TV volume and power.
- “All power” controls both the TV and Xfinitybox together. So when they are out of sync, use the “TV power” button to control just the TV.



Correct Configuration



Input selection

Xfinity box

HDMI wall box

